


RANGE :
Control the intensity of the envelope dynamics generated by your attack on the guitar strings

ATTACK :
This control lets you dial in finer adjustments to the attack of the envelope

OUTPUT

9V DC INPUT
Jack 2.1
Negative center

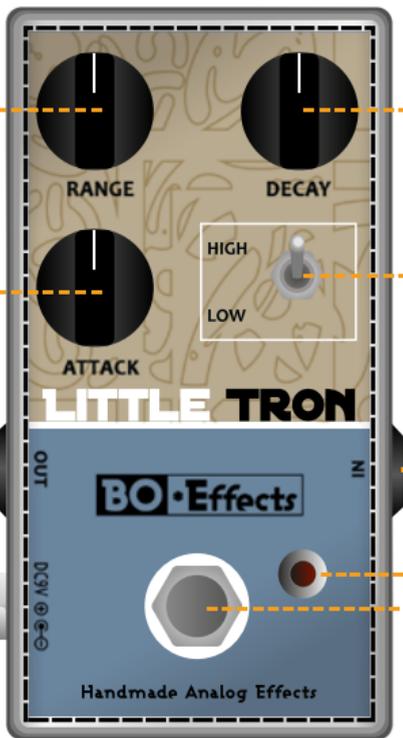

DECAY :
Control who determines how long it takes for the envelope to sweep the filter

HIGH/LOW Switch :
This switch controls the range of the filter

INSTRUMENT INPUT


ON/OFF Statut LED
ON/OFF True Bypass

RANGE :
Contrôle l'intensité de l'enveloppe dynamique générée par votre attaque sur les cordes de guitare

ATTACK :
Ce contrôle permet de régler plus finement l'attaque de l'enveloppe

SORTIE

ENTRÉE 9V DC
Jack 2.1
Centre Négatif

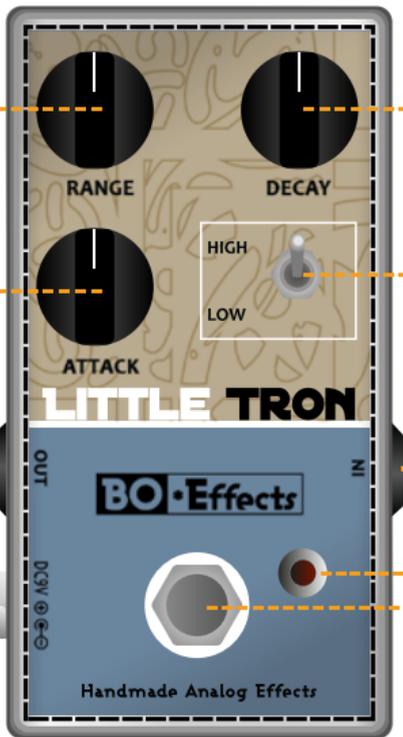

DECAY :
Contrôle qui détermine le temps nécessaire de l'enveloppe à balayer le filtre

HIGH/LOW Switch :
Le switch contrôle la gamme de fréquence utilisée HIGH (Aigu) et LOW (Grave)

ENTRÉE INSTRUMENT

LED de Statut ON/OFF
ON/OFF True Bypass